

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

27/02/2009

GASOLINE ENGINE															MAINTENANCE OPERATIONS			Prius							
SERVICE INTERVALS:															R: Replace or change or lubricate.			F: Fill							
Odometer reading or months, whichever comes first				ODOMETER READING												Months	1NZ-FXE (1.5 + Hyb)								
			× 1,000 km	1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5		90	NHW20							
MAINTENANCE ITEMS			× 1,000 miles	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5		54	() : for reference	03/08 05/02	05/12(MC) 06/08 07/08 08/08					
Timing Belt				Replace every 150,000 km (90,000 miles)												—									
Valve Clearance (Sensory Inspection)*1																*I	(Every 72 months)	●	●						
Drive belt		V-ribbed belt		Inspect 105,000 km (63,000 miles), after 105,000 km Inspect every 15,000 km (9,000 miles)												Initial: 72 and then every 12 months		●	●						
Engine oil (API: SH, SJ) (ILSAC)		Normal		R			R			R			R			R		Every 12 months							
		Severe		R			R			R			R			R		Every 6 months							
Engine oil (API: SJ, SL) (ILSAC)		Normal		R			R			R			R			R		Every 12 months							
		Severe		R			R			R			R			R		Every 6 months							
Engine oil (API: SL, SM) (ILSAC)		Normal		R			R			R			R			R		Every 12 months							
		Severe		R			R			R			R			R		Every 6 months							
Engine oil filter		Normal		R			R			R			R			R		Every 12 months							
		Severe		R			R			R			R			R		Every 6 months							
Cooling and heater system *2							I						I			I		Every 24 months							
Engine coolant		LLC (red/green) *3														R		R		Initial: 36 months					
		S-LLC (pink) *4														I			I						
				First replace at 150,000 km (90,000 miles); after, every 90.000 km (54.000 miles)														●		●					
																I			I						
Inverter coolant		S-LLC (pink) *4														I			I			●		●	
				First replace at 150,000 km (90,000 miles); after, every 90.000 km (54.000 miles)														●		●					
				First replace at 240,000 km (150,000 miles); after, every 90.000 km (54.000 miles)																					
Exhaust pipes and mountings							I			I						I		Every 24 months							
Spark plugs		Platinum or Iridium Tipped type		Replace every 90,000 km (54,000 miles)												—		●		●					
		Others					I			R						I		I: Every 24 months R: Every 48 months							
Battery				No maintenance												—									
Fuel filter		(Aygo only)		Replace every 180.000 km (108.000 miles)												15 years									
Fuel injection system *6				F			F			F			F			F			—						
				Fill every 105.000 km															—						
Air cleaner filter (from October 2002, applicable to all models in production)		Normal		I			I			I			R			I			I: Every 24 months R: Every 48 months						
		Dusty road		I			I			I			I			R			I: Every 12 months R: Every 48 months						
Air cleaner filter		Normal		I			I			R			I			R			I: Every 24 months R: Every 48 months						
		Dusty road		Inspect every 2,500 km(1,500 miles) and replace every 45,000 km(27,000 miles) or 48 months.												—									
Fuel tank cap, fuel lines, connections and fuel vapor control valve							I			I						I			Every 24 months						
Charcoal canister		*5														I			I			—			
		Others								I						I			Every 24 months						
		Aygo only		Normal														I			—				
Severe										I						I			Every 24 months						
Charcoal canister filter		Aygo only		Normal														R			—				
				Severe								R						R			Every 24 months				

*1: Check for tappet noise and engine vibration and adjust if necessary.

*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary

*3: After 60,000 km (36,000 miles) or 36 months, replace every 30,000 km (18,000 miles) or 24 months.

*4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)

*5: For Sweden, Norway and Finland only.

*6: Use Toyota Genuine Fuel Injector Cleaner (08813-00820) or equivalent

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

MAINTENANCE OPERATIONS																				
I: Inspect and correct or replace as necessary. T: Tighten to specified torque.																				
R: Replace or change or lubricate. L: Lubricate																				
CHASSIS AND BODY 1/2																				
SERVICE INTERVALS:			ODOMETER READING																	
															Months		Prius NHW20			
× 1,000 km			1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90					
MAINTENANCE ITEMS			× 1,000 miles	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54	03/08 05/12	06/08 07/08 08/08		
Clutch pedal, return spring and damper - Mechanical type					I				I		I			I						
Brake pedal and parking brake																I	Every 24 months	●	●	
Brake linings and drums			Normal													I	Every 24 months	●	●	
(Include brake linings of parking brake)			Severe			I		I		I		I		I		I	Every 12 months	●	●	
Brake pads and discs			Normal													I	Every 12 months	●	●	
			Severe		I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months	●	●	
Clutch fluid	- M/T - MMT (Diesel)	SAE J1703 or FMVSS No. 116 DOT3														I	Every 24 months			
																R	Every 24 months			
		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4															I	Every 24 months		
																R	Every 24 months			
	- MMT (Gasoline)	SAE J1704 or FMVSS No. 116 DOT4															I	Every 24 months		
																	I	Every 24 months		
																	R	Every 24 months		
																	I	Every 24 months		
			First replace at 120,000 km (72,000 miles) or 96 months; then, every 90,000 km (54,000 miles) or 72 months																	
Clutch fluid for auto clutch system																R	Every 24 months			
Sequential M/T system fluid																I	Every 24 months			
Brake fluid	SAE J1703 or FMVSS No. 116 DOT3															R	Every 24 months	●	●	
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4															R	Every 24 months			
	SAE J1704 or FMVSS No. 116 DOT4															R	Every 24 months			
Brake pipes and hoses																I	Every 24 months	●	●	
Vacuum pump for brake booster (Diesel and Valvematic engines)			ixetic (Luk-AT) or Pierburg	Diesel	Replace every 195,000 km (121,000 miles) or 120 months															
			Valvematic																	
			Others		Inspect every 195,000 km (121,000 miles) or 120 months															
Power steering fluid			A/T fluid DEXRON® II or III													I	Every 24 months			
			TOYOTA P.S. fluid EH or equivalent													I	Every 24 months			
Steering wheel, linkage and steering gear box			Normal													I	Every 24 months	●	●	
			Severe			I		I		I		I		I		I	Every 12 months	●	●	
SRS airbag *1			Initial inspect at first 120 months from the vehicle registration date.																	
Propeller shaft	NLGI No. 1 or No. 2	Normal		L			L		L		L		L		L		Every 24 months			
		Severe		L	L		L	L	L		L	L	L		L		Every 12 months			
Propeller shaft bolts			Normal													T	Every 24 months			
			Severe			T		T		T		T		T		T	Every 12 months			
Drive shaft boots		Normal														I	Every 24 months	●	●	
		Severe			I		I		I		I		I		I		I	Every 12 months	●	●
		Normal														I	Every 12 months			
		Severe			I	I		I	I	I	I	I	I	I	I	I	I	Every 6 months		
		Normal														T	Every 24 months			
Drive shaft bolts		Severe			T		T		T		T		T		T		T	Every 12 months		
		Normal			T		T		T		T		T		T		T	Every 12 months		
		Severe			T	T		T	T	T		T	T	T		T		Every 6 months		
		Normal														I	Every 24 months	●	●	
		Severe														I	Every 12 months	●	●	
Suspension ball joints and dust covers			Normal													I	Every 12 months			
			Severe			I		I		I		I		I		I	Every 12 months			
			Normal													I	Every 12 months			
			Severe			I	I		I	I	I	I	I	I	I	I	Every 6 months			
Shift lever of 6-speed manual transmission																I	--			
Automatic transmission fluid	Vehicles produced before July, '99	Normal														I	I: Every 12 months R: Every 48 months			
		Severe			I		R		I	R		I		R			I: Every 12 months R: Every 24 months			
		Normal													I	Every 36 months				
		Severe													R	I: Every 36 months R: Every 72 months				
	Vehicles produced after August, '99	Toyota Genuine ATF type T-IV	Normal													I	Every 48 months			
			Severe													R	I: Every 36 months R: Every 72 months			
		Toyota Genuine ATF WS	Normal													I	Every 48 months	●	●	
			Severe													R	I: Every 36 months R: Every 72 months	●	●	
		Toyota Genuine CVTF TC	Normal													I	Every 48 months			
			Severe													R	I: Every 36 months R: Every 72 months			
		Other	Normal													I	Every 36 months R: Every 72 months			
			Severe													R	I: Every 36 months R: Every 72 months			
Manual transmission oil and transfer oil if so equipped (Including auto clutch system)			API Gear oil GL-5	Normal											I	Every 48 months				
		Severe													R	Every 48 months				
		API Gear oil GL-4 or GL-5	Normal												I	Every 48 months				
		Severe													R	Every 48 months				
		LV Gear oil API GL-4	Normal												I	Every 48 months				
		Severe													R	Every 48 months				
		Other (GL-4 or GL-5)	Normal												I	Every 48 months				
		Severe													R	Every 48 months				
Transfer oil	API Gear oil GL-4 or GL-5		Normal													I	Every 48 months			
			Severe													R	Every 48 months			
	API Gear oil GL-5															R	Every 48 months			
			Normal													I	Every 48 months			
			Severe													R	Every 48 months			
	Toyota Genuine Differential Oil LX85 (API: GL-5)		Normal													I	Every 48 months			
			Severe													R	Every 48 months			
	Toyota Genuine ATF WS		Normal													I	Every 48 months			
		Severe													R	I: Every 36 months R: Every 72 months				

*1: After 120 months from the vehicle registration date, inspect every 24 months.

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

27/02/2009

CHASSIS AND BODY 2/2																						
SERVICE INTERVALS:																						
MAINTENANCE OPERATIONS																						
I: Inspect and correct or replace as necessary. T: Tighten to specified torque.																						
R: Replace or change or lubricate. C: Clean																						
ODOMETER READING																						
Months																						
Prius																						
NHW20																						
03/08 05/12 06/08 07/08 08/08																						
MAINTENANCE ITEMS																						
x 1,000 km																						
x 1,000 miles																						
Front Differential oil	Differential integrated with transmission	M/T model	API Gear oil GL-4 or GL-5	Normal							I							Every 48 months				
				Severe								R						Every 48 months				
			LV Gear oil API GL-4	Normal									I						Every 48 months			
				Severe										R					Every 48 months			
		A/T model																				
				Toyota Genuine ATF type T-IV	Normal									I					I	Every 36 months		
					Normal														I	Every 48 months		
			Severe											I					R	I: Every 36 months R: Every 72 months		
			Toyota Genuine ATF WS	Normal									I						I	Every 36 months	●	
				Normal														I	Every 48 months		●	
				Severe										I					R	I: Every 36 months R: Every 72 months	●	●
																				Every 48 months		
			Toyota Genuine CVTF TC	Normal										I					R	I: Every 36 months R: Every 72 months		
				Severe										I								
			Differential separated from transmission (API Gear oil GL-5)																			
	Rear differential oil		API Gear oil GL-5														R	Every 48 months				
			A/T fluid WS	Normal													R	Every 48 months				
				Severe													R	I: Every 36 months R: Every 72 months				
Wheel bearing grease (tapered roller type wheel bearing only) and ball joint grease			NLGI No. 2	Normal												R	Every 24 months					
				Severe												R	Every 12 months					
Front and rear suspension				Normal												I	Every 24 months	●	●			
				Severe													I	Every 12 months	●	●		
Active height control suspension fluid - Suspension fluid AHC or equivalent																R	—					
Active height control gas chamber																I	I: initial 48 months; then every 12 months					
Bolts and nuts on chassis and body				Severe only												T	Every 12 months	●	●			
Tires and inflation pressure				Normal												I	Every 24 months	●	●			
				Severe													I	Every 12 months	●	●		
Air conditioning filter																						
				Normal															I	Every 24 months		
				Dusty road															I	Every 12 months		
				Normal															R	Every 24 months		
				Dusty road															R	Every 12 months		
				Normal & Dusty road															R	Every 24 months		
Particle filter	Foldable type	Normal														R	"Clean" replaced by "Inspect"					
		Dusty road														R	Refer to TME letter of October 2007					
	Pollen removal type	Normal														R	on "Potential Health Risk From					
		Dusty road														R	Cleaning of Cabin Air Filter Elements					
		**														R						
	Standard type & high efficiency type	Normal														R		●	●			
Dusty road															R		●	●				
Combination filter	Combination filter (high efficiency type)	Normal													R							
		Dusty road													R							
				Replace when the service indicator light illuminates																		
Corrosion Inspection																I	Every 24 months	●	●			

** : with Solar power ventilation system