


Sicherungskasten Motorraum

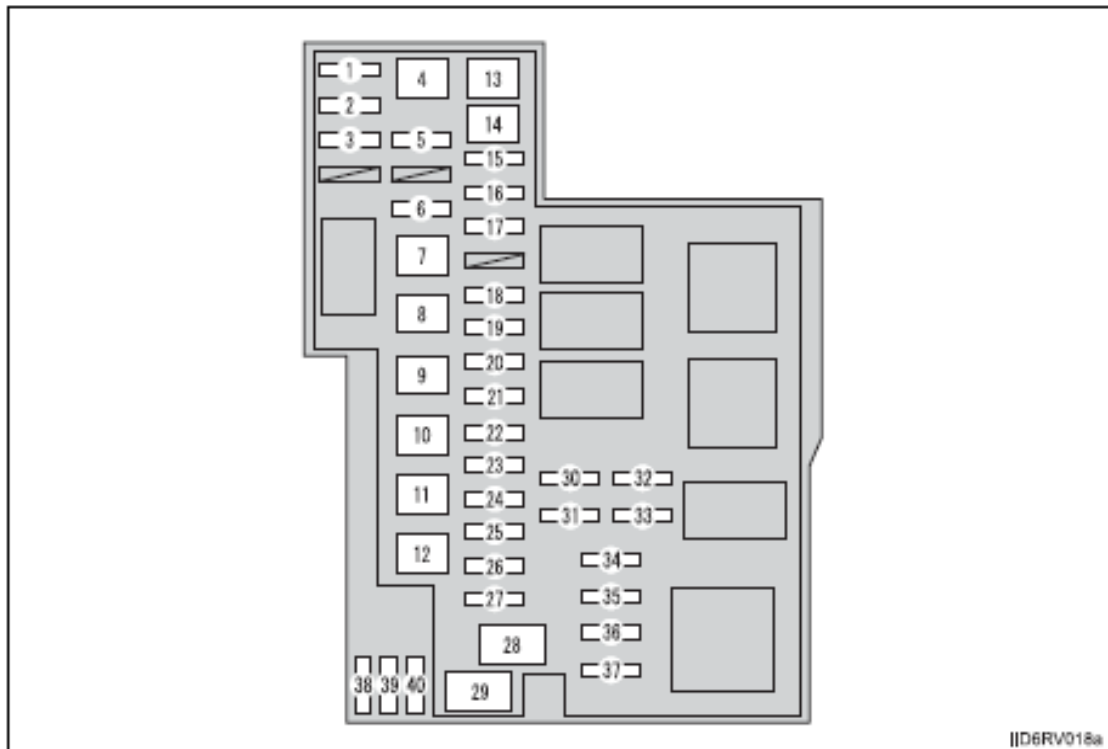


IID6RV018a

Fuse		Ampere	Circuit
1	RADIO	20	Audio system
2	ECU-B NO.1	10	Wireless remote control, steering sensor, main body ECU, clock, power back door ECU, tire pressure warning system, driving position memory ECU
3	DOME	10	Engine switch light, interior lights, vanity lights, luggage compartment light, personal lights
4	CDS FAN	30	Electric cooling fans
5	DEICER	20	Windshield wiper de-icer
6	FOG FR	7.5	Fog lights, fog light indicator
7	PTC HTR NO.2	30	PTC heater
8	PTC HTR NO.1	30	PTC heater
9	DEF	30	Rear window defogger, MIR HTR
10	ABS NO.2	30	Vehicle stability control

Fuse		Ampere	Circuit
11	RDI FAN	30	Electric cooling fans
12	ABS NO.1	50	Vehicle stability control
13	HTR	50	Air conditioning system
14	H-LP-MAIN	50	H-LP RH-LO, H-LP LH-LO, H-LP RH-HI, H-LP LH-HI, daytime running lights
15	AMP	30	Audio system
16	ST	30	Starting system
17	EFI-MAIN NO.1	20	Multiport fuel injection system/sequential multiport fuel injection system, EFI NO.1, EFI NO.2
18	IG2	15	METER, IGN, A/B, multiport fuel injection system/sequential multiport fuel injection system
19	TURN & HAZ	10	Gauges and meters
20	AM2	7.5	IG2, starting system
21	ECU-B NO.2	10	Air conditioning system ECU, gauges and meters, front passenger occupant classification system ECU, smart key system
22	STRG LOCK	10	Steering lock ECU
23	D/C CUT	30	DOME, ECU-B NO.1, RADIO
24	HORN	10	Horn
25	ETCS	10	Multiport fuel injection system/sequential multiport fuel injection system
26	EFI-MAIN NO.2	20	Air flow sensor, fuel pump, rear O2 sensor
27	ALT-S/ICS	7.5	Electric current sensor
28	EPS	80	Electric power steering
29	ALT	120	ABS NO.1, ABS NO.2, PTC HTR NO.1, PTC HTR NO.2, DEICER, HTR, RDI FAN, CDS FAN, FOG FR, DEF
30	MIR HTR	10	Outside rear view mirror defoggers, multiport fuel injection system/sequential multiport fuel injection system

Fuse		Ampere	Circuit
31	WIPER-S	5	Windshield wiper switch, electric current sensor
32	H-LP LH-LO	10	Left-hand headlight (low beam)
33	H-LP RH-LO	10	Right-hand headlight (low beam)
34	EFI NO.1	10	Air flow meter, purge control VSV, ACIS VSV
35	EFI NO.2	10	Multiport fuel injection system/sequential multiport fuel injection system, key off pump module
36	H-LP LH-HI	10	Left-hand headlight (high beam), headlight high beam indicator
37	H-LP RH-HI	10	Right-hand headlight (high beam)
38	SPARE	10	Spare fuse
39	SPARE	20	Spare fuse
40	SPARE	30	Spare fuse

Sicherungskasten unter Armaturenbrett

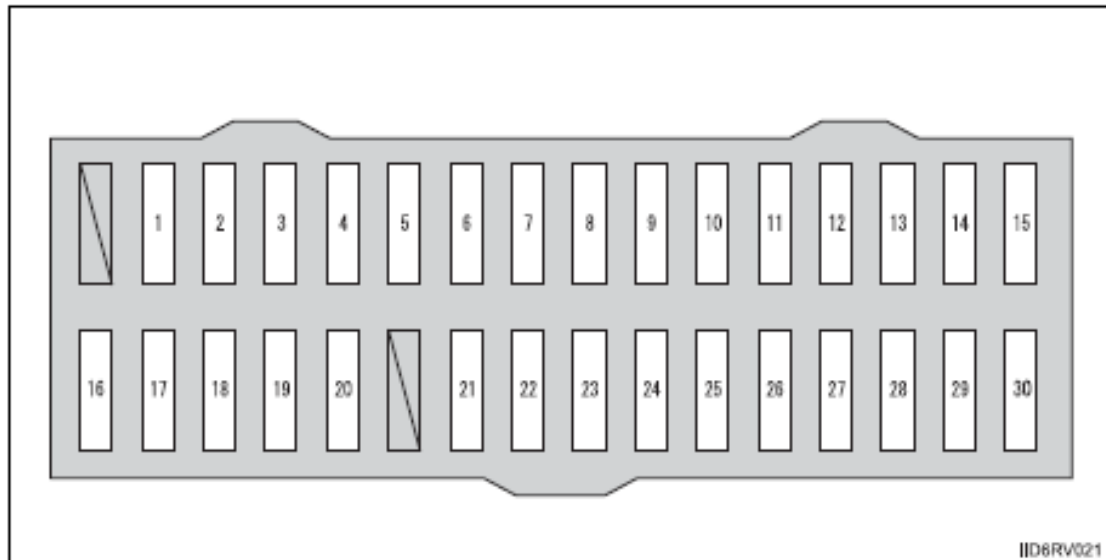


Fuse		Ampere	Circuit
1	STOP	7.5	Stop lights
2	S/ROOF	10	Moon roof
3	AM1	5	IG1 NO.1, IG1 NO.2, IG1 NO.3, ACC
4	OBD	7.5	On-board diagnosis system
5	D/L NO.2	20	Power door lock system (side doors), main body ECU
6	FOG RR	7.5	No circuit
7	D/L BACK	10	Power door lock system (back door)
8	P/OUTLET NO.1	15	Power outlets
9	DOOR D	20	Driver's door power window
10	DOOR R/R	20	Right-hand rear door power window
11	DOOR R/L	20	Left-hand rear door power window
12	WIP RR	15	Rear window wiper
13	WSH	15	Windshield washer, rear window washer
14	GAUGE	7.5	Back-up lights, Blind Spot Monitor system, inside rear view mirror
15	WIP FR	25	Windshield wipers
16	SFT LOCK-ACC	5	Shift lock system ECU
17	P/OUTLET NO.2	15	Power outlets

Fuse		Ampere	Circuit
18	ACC	7.5	Power outlets, audio system, outside rear view mirrors, main body ECU, clock, electric current sensor
19	PANEL	7.5	VSC OFF switch, instrument cluster (indicators and warning lights), BSM main switch, all-wheel drive lock switch, windshield wiper de-icer switch, multipoint fuel injection system/sequential multipoint fuel injection system, intuitive parking assist ECU, seat heater switches, power outlets, power back door switches, air conditioning system switches, rear window defogger switch, audio system, cup holder light, steering switches, driver module switch
20	TAIL	10	Parking lights, tail lights, license plate lights, side marker lights, fog lights
21	EPS-IG	5	Electric power steering
22	ECU-IG NO.1	10	Dynamic Torque Control AWD system ECU, steering sensor, instrument cluster (indicators and warning lights), shift control switch
23	ECU-IG NO.2	5	Main body ECU, wireless remote control, shift lock system ECU, smart key system, moon roof ECU, audio system, power back door ECU, tire pressure warning system, LDA system, Blind Spot Monitor system
24	HTR-IG	7.5	Air conditioning system ECU, air conditioning system switches, rear window defogger switch
25	S-HTR LH	10	Left-hand seat heater
26	S-HTR RH	10	Right-hand seat heater
27	IGN	7.5	Fuel pump, multipoint fuel injection system/sequential multipoint fuel injection system, stop lights, steering lock system ECU

Fuse		Ampere	Circuit
28	A/B	7.5	SRS airbag system ECU, front passenger occupant classification system ECU
29	METER	5	Gauges and meters
30	ECU-IG NO.3	7.5	Alternator, anti-lock brake system/vehicle stability control ECU, stop lights, FAN NO.1, FAN NO.2, FAN NO.3, HTR, PTC, DEF, DEICER, windshield wiper de-icer switch

Hinter der Seitenverkleidung

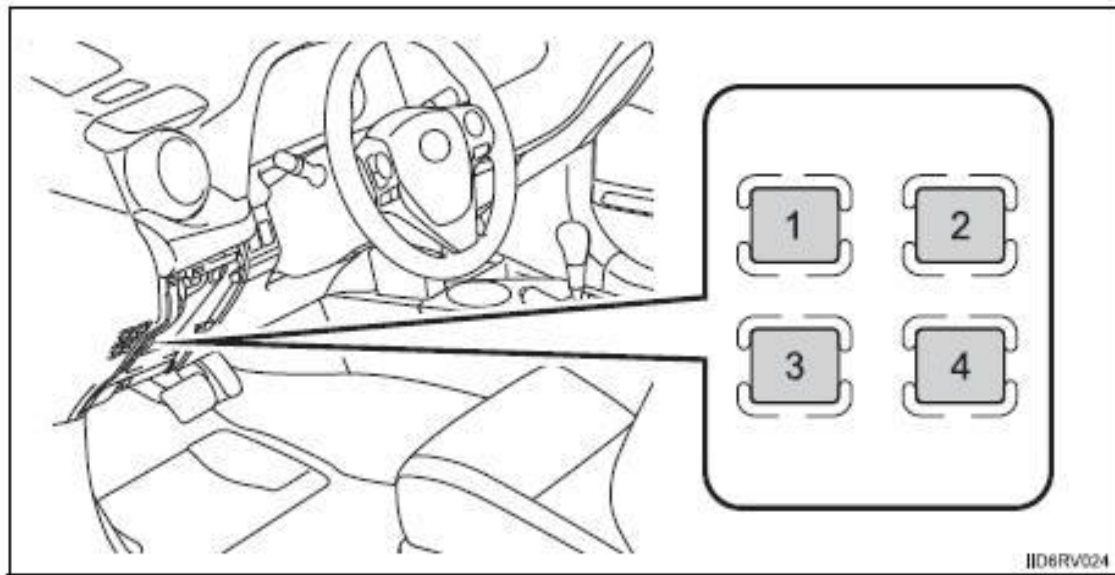

	Fuse	Ampere	Circuit
1	P/SEAT F/L	30	Left-hand power seat
2	P/SEAT F/R	30	No circuit
3	PBD	30	Power back door
4	P/W MAIN	30	Front power windows, power window main switch